



CUSTOM MOLDED FRONT MUD GUARD FOR SILVERADO INSTALLATION INSTRUCTIONS


Tools Required

- T-15 Torx Head Bit / Driver

Package Contents

- Driver & passenger side front mud guard
- Film to protect vehicle finish

INSTALLATION STEPS

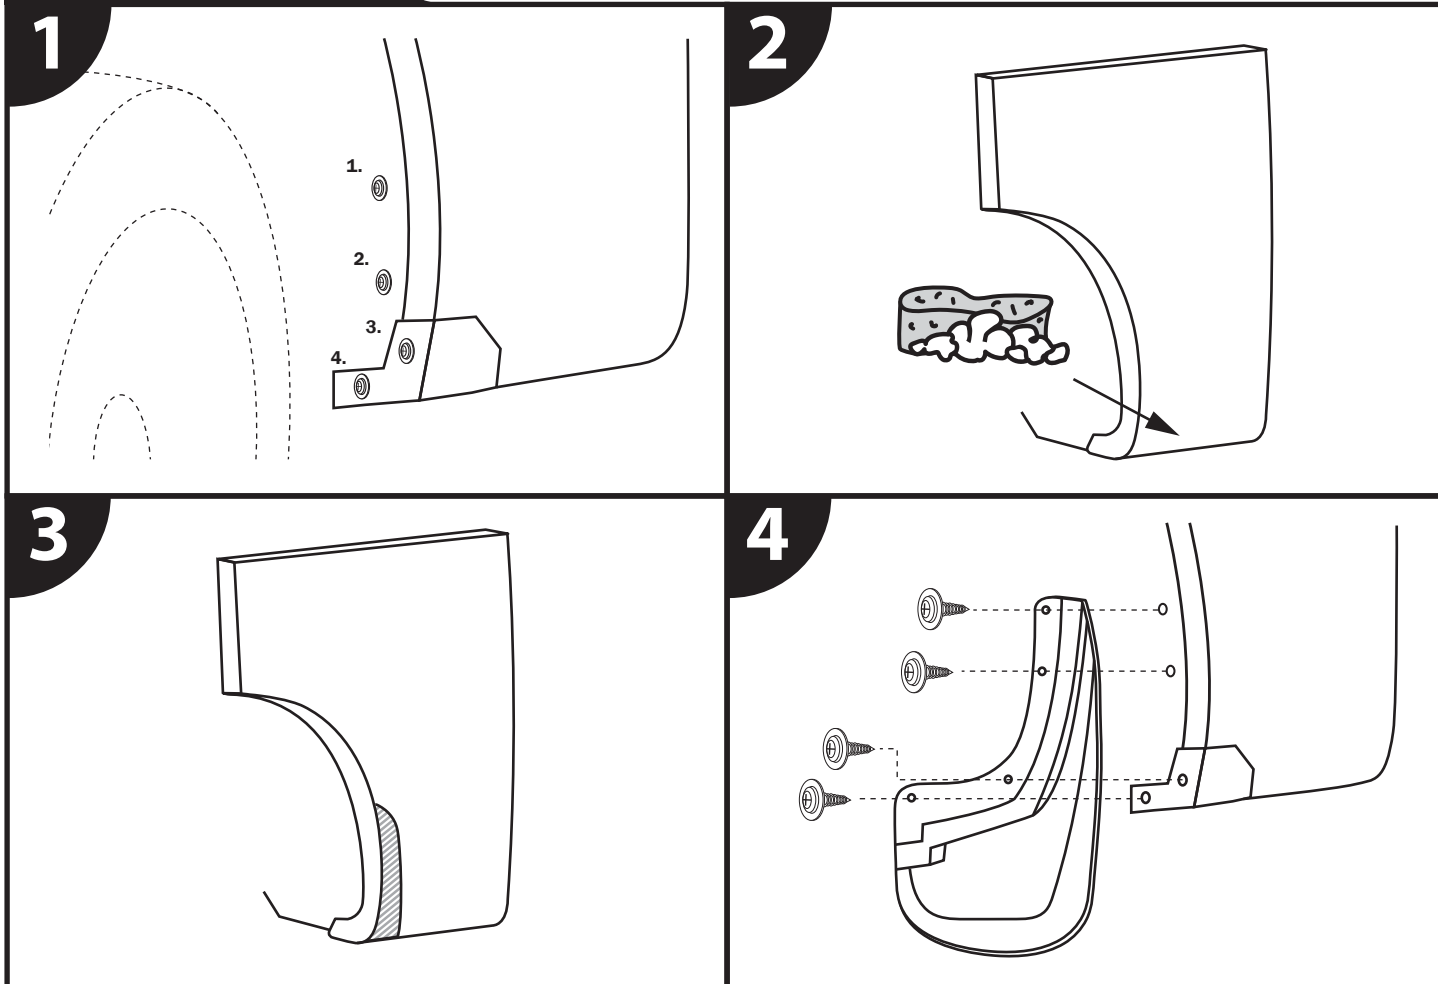

Repeat Steps 1-4 for Driver & Passenger Side

STEP 1. Remove the four existing screws from inside the fender well with T-15 torx bit.

STEP 2. Thoroughly clean the area on the fender where the protection film will be placed.

STEP 3. Remove backing from the film to protect vehicle. Use a soapy water mixture to thoroughly wet the film to protect vehicle and wet the fender, apply film as shown. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 4. Align Red Hound Auto™ mud guards inside of the front fender well, screw into place with removed existing screws removed during step 3 of installation.