



CUSTOM MOLDED FRONT MUD GUARD FOR RAM INSTALLATION INSTRUCTIONS

Tools Required


- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit

Package Contents


- Driver & passenger side front mud guard
- Film to protect vehicle
- #10 SEM Screws (6x)
- Medium U-Clip (6x)

STEP 1 – DETERMINE WHICH EXISTING FENDER GUARDS YOUR RAM HAS. Does your vehicle have have A or B?

- A. IF YOU HAVE A SMALL GUARD, PROCEED TO STEP 2.
B. IF YOU HAVE A LARGE GUARD, PROCEED TO STEP 5.

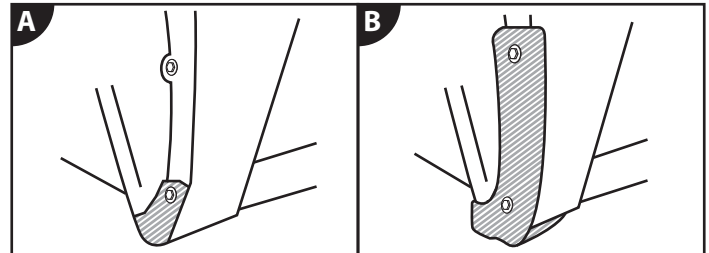

FOR EXISTING SMALL GUARDS ONLY

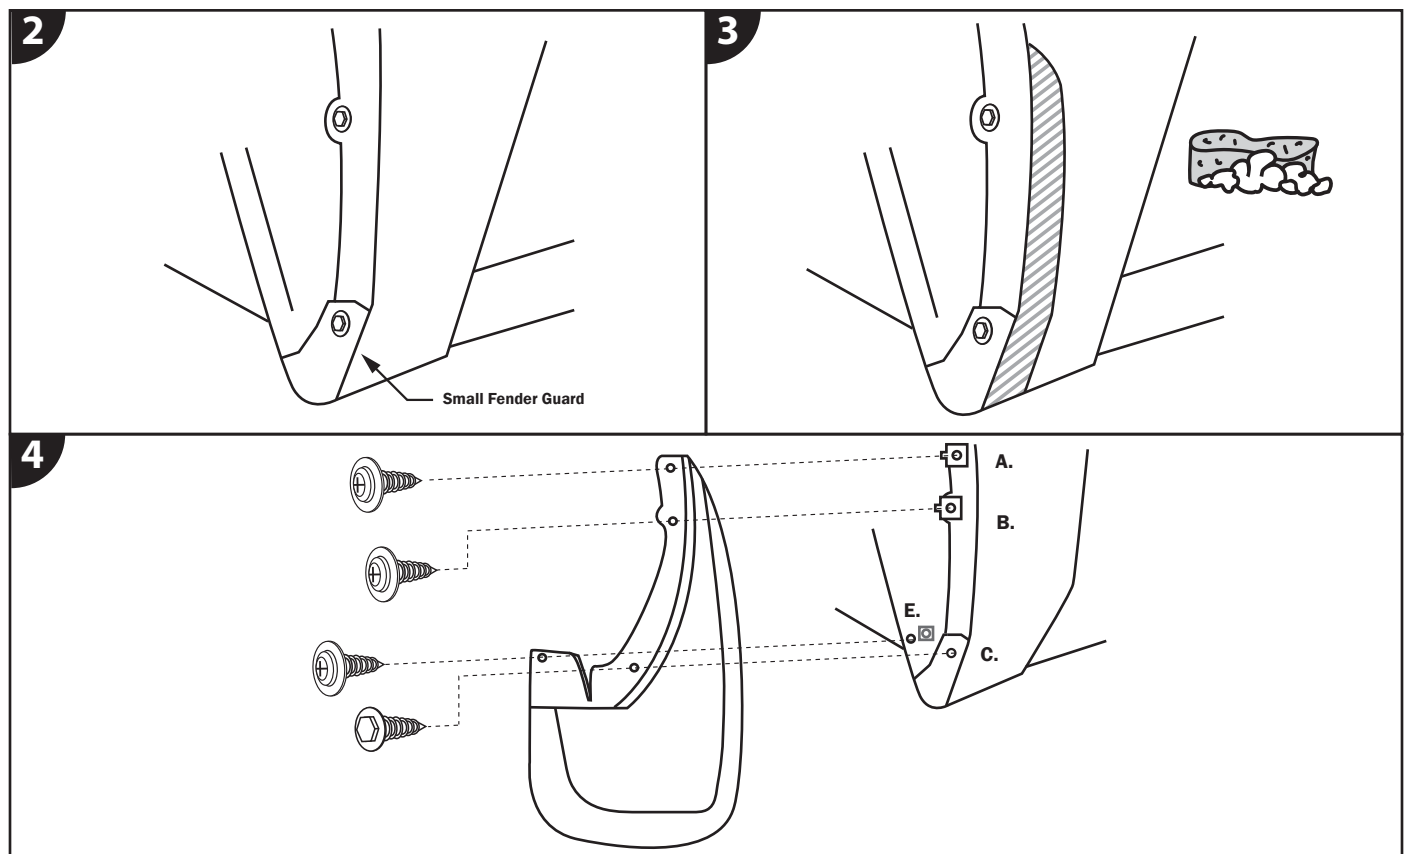

FOR EXISTING SMALL GUARDS ONLY

STEP 2. Identify Fender Guard

- a. If your vehicle has the small fender guard you do not need to remove. (If you have the large guard you will need to remove, see step 5)

STEP 3. Film to Protect Vehicle

- a. Clean the area where the film to protect vehicle will be placed on the fender with a clean cotton cloth or wet alcohol pad.
b. Use soapy water to wet film and install as shown on a clean fender. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 4. Mud Guard Installation

- a. Remove the existing fastener from location C.
b. If you have a factory fastener at location B remove it as well.
c. Attach the mud guard at location C (and B if applicable) with the existing fastener(s).
d. If there is no existing fastener at location B, using mud guard as a template drill 1/8" hole and install medium u-clip and #10 screw.
e. Using the mud guard as a template, mark and drill 1/8" hole at location A and E.
f. Install a Medium U-Clips at location A and E and install #10 SEM Screws.



CUSTOM MOLDED FRONT MUD GUARD FOR RAM INSTALLATION INSTRUCTIONS

Tools Required

- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit


Package Contents

- Driver & passenger side front mud guard
- Film to protect vehicle
- #10 SEM Screws (6x)
- Medium U-Clip (6x)

STEP 5 – CONFIRM YOU HAVE THE LARGE EXISTING FENDER GUARD.

Continue to step 6 if your vehicle has the large fender guard.

FOR EXISTING LARGE GUARDS ONLY

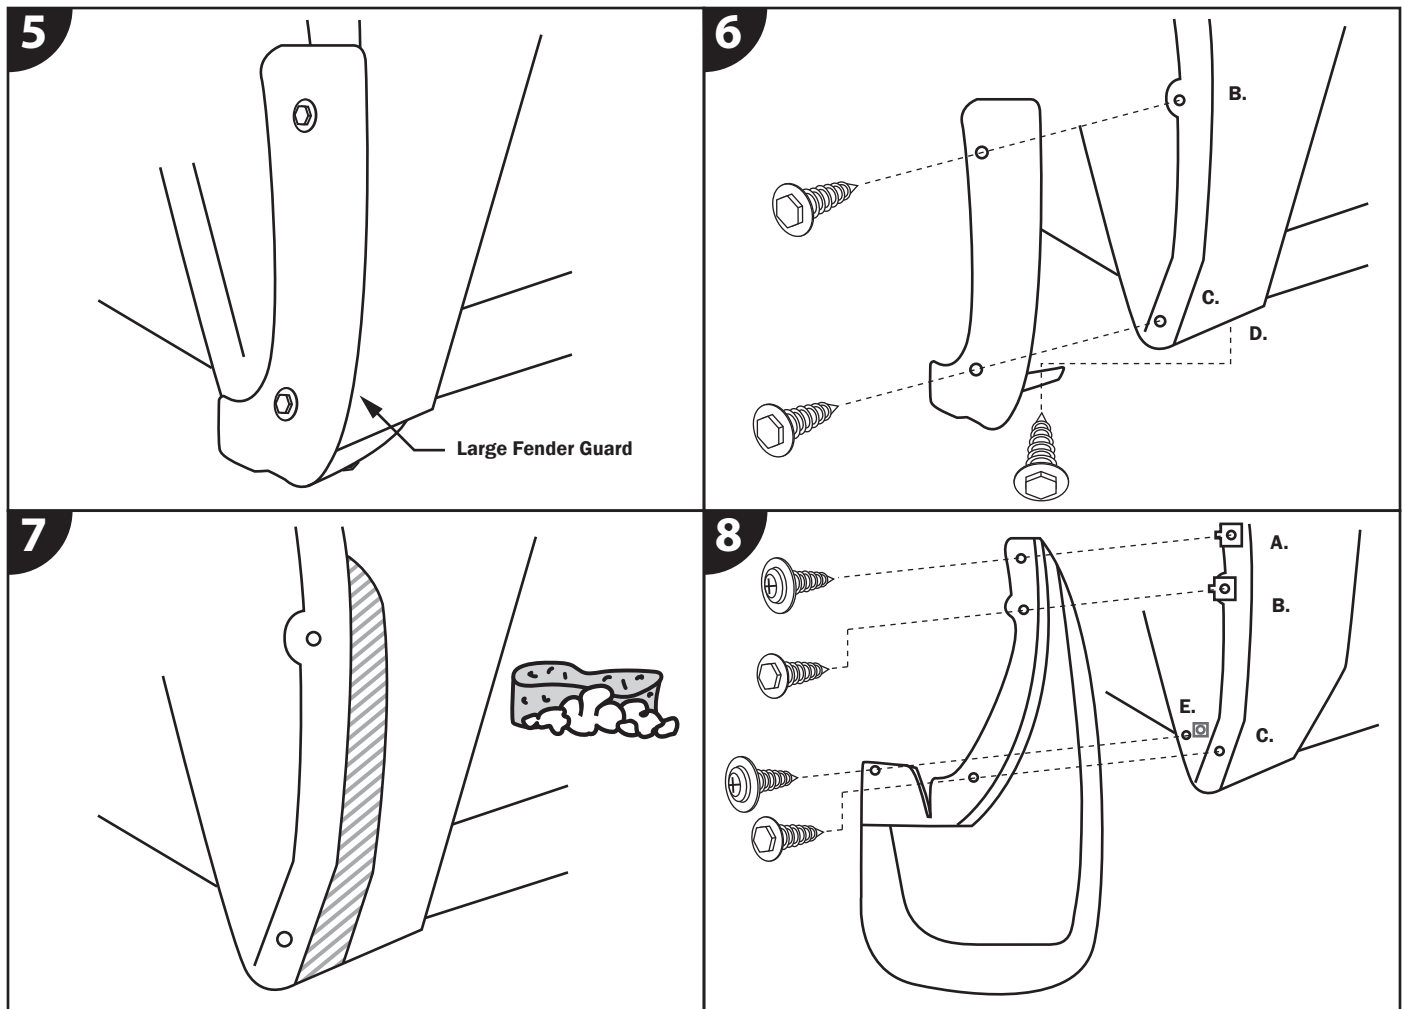

FOR EXISTING LARGE GUARDS ONLY

STEP 6. Fender Guard Removal

- Remove the three factory fastener to remove the large fender guard. (If you have small guard see step 2)

STEP 7. Film to Protect Vehicle

- Clean the area where the film to protect vehicle will be placed on the fender with a clean cotton cloth or wet alcohol pad.
- Use soapy water to wet film and install as shown on a clean fender. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 8. Mud Guard Installation

- Remove the existing fastener from location B, C and D. Reuse fastener B and C after removal of the large fender guard.
- Attach the mud guard at location C (and B if applicable) with the existing fastener(s).
- Using the mud guard as a template, mark and drill 1/8" hole at location A and E.
- Install a Medium U-Clips at location A and E and install #10 SEM Screws.