

# INSTALLATION INSTRUCTIONS



No. 940187




## CUSTOM MOLDED REAR MUD GUARDS FOR RAM WITH FENDER FLARES

### Tools Needed

- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit

### Included in Box

- Rear Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 SEM Screws (2x)
- Small U-Clip (2x)

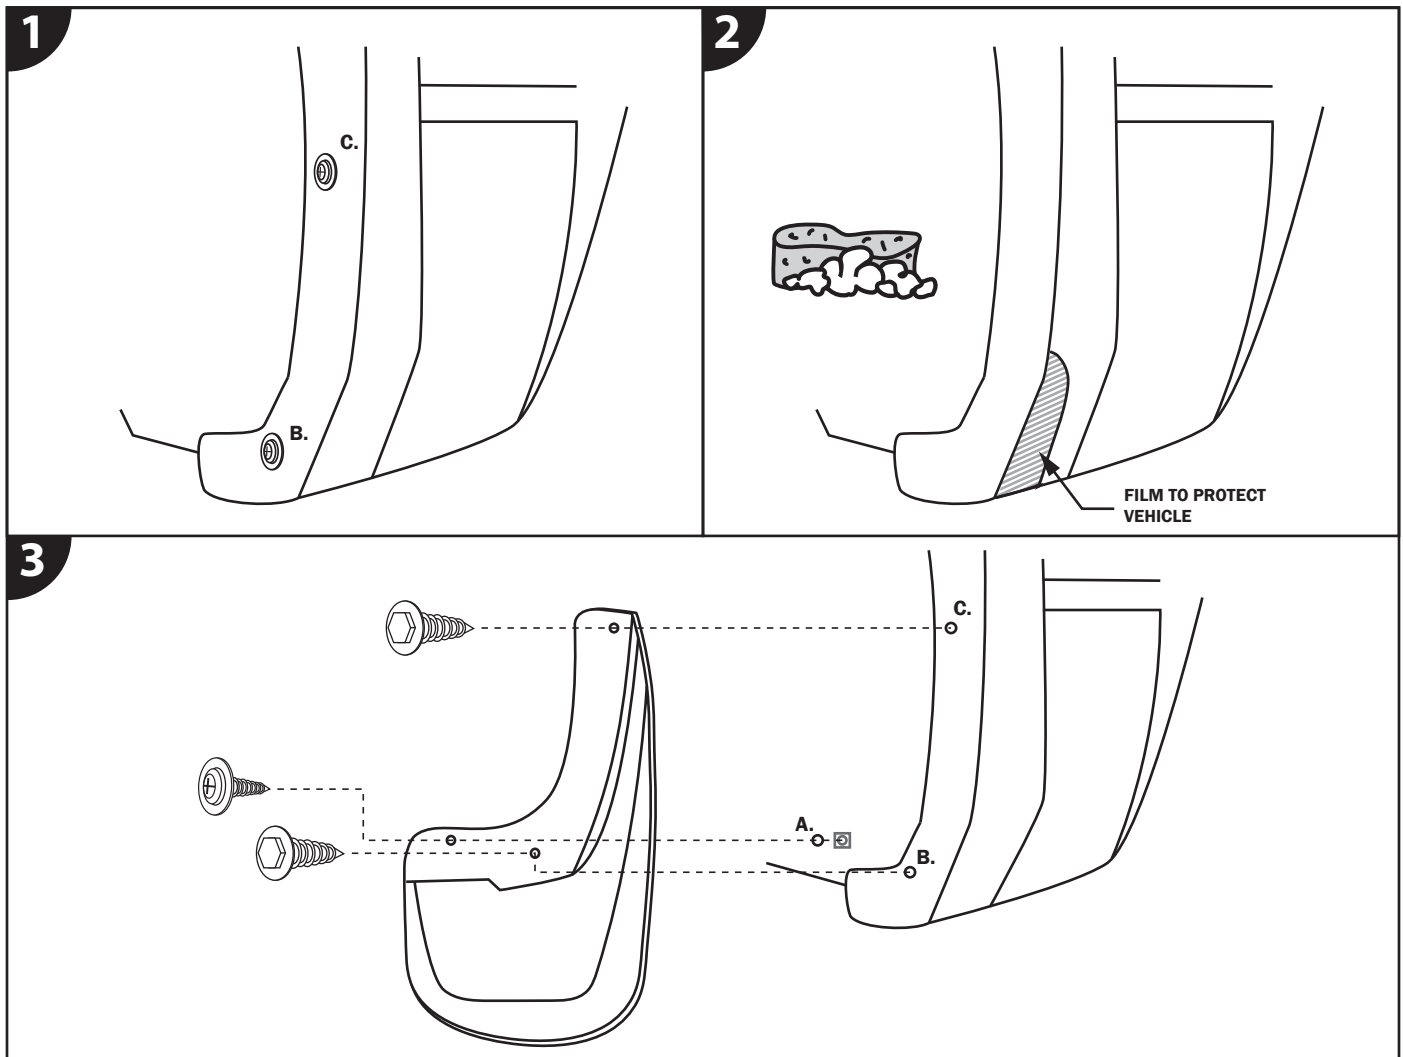

\*Repeat Steps 1-3 for Driver & Passenger Side\*

### STEP 1. Remove existing fasteners.

- a. Remove your existing fasteners from locations B and C. These will be reused again in Step 3.

### STEP 2. Apply film to protect vehicle.

- a. Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- b. Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 3. Install mud guards.

- a. Using your existing factory fasteners, attach the mud guard at locations B and C.
- b. Use the mud guard as a template to mark and then drill a 1/8" hole at location A.
- c. With the U-Clip placed behind the fender liner, screw in a #10 SEM screw at location A, through the mud guard and fender liner, into the U-Clip. **NOTE\*** The U-Clip is installed behind the fender liner (it is not attached over the fender liner, flare or fender).