

# INSTALLATION INSTRUCTIONS



No. 940189




## CUSTOM MOLDED REAR MUD GUARDS FOR FORD F-150 WITH FENDER FLARES

### Tools Needed

- Drill with 1/8" bit
- Center punch
- Phillips head screwdriver

### Included in Box

- Rear Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 SEM Screws (8x)
- U-Clips (2x)

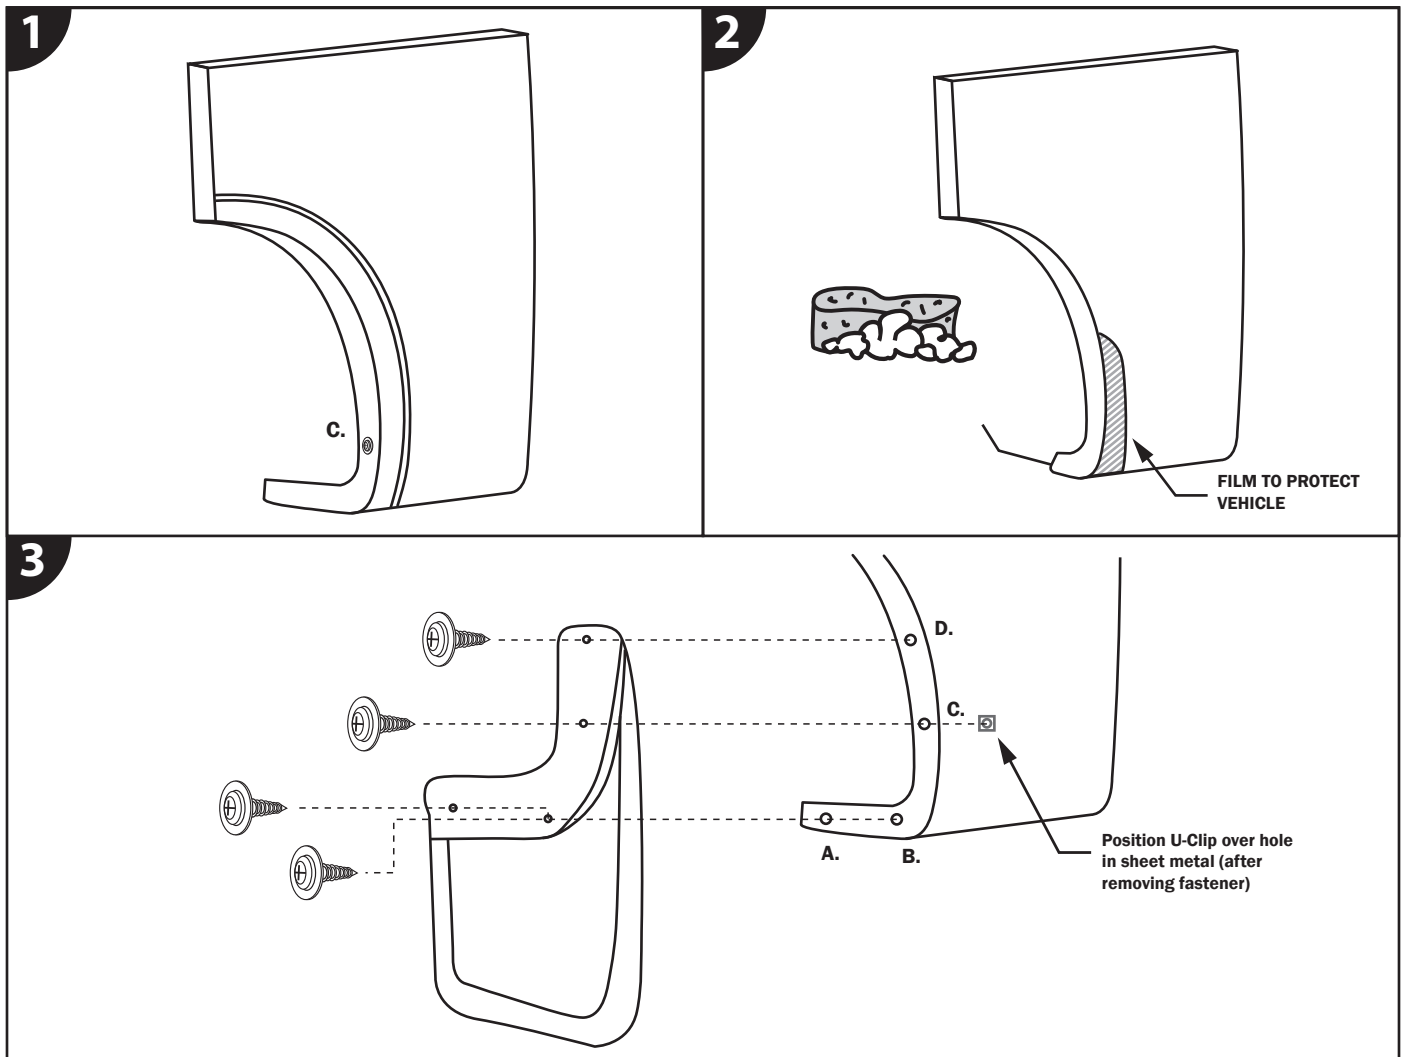

\*Repeat Steps 1-3 for Driver & Passenger Side\*

### STEP 1. Remove existing fasteners.

- a. Remove your existing fastener from location C.

### STEP 2. Apply film to protect vehicle.

- a. Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- b. Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 3. Install mud guards.

- a. Position a U-Clip over the sheet metal at location C, aligning with the fastener hole.
- b. Using a #10 SEM screw, attach the mud guard at location C. Check alignment before tightening and moving to the next steps.
- c. Use the mud guard as a template to center punch and then drill a 1/8" hole at locations A, B, and D.
- d. Screw #10 SEM screws into newly-drilled locations A, B, and D.