

INSTALLATION INSTRUCTIONS



No. 940195




CUSTOM MOLDED FRONT MUD GUARDS FOR FORD SUPER DUTY

Tools Needed

- Drill with 1/8" bit
- Center punch
- Phillips head screwdriver

Included in Box

- Front Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screw (x8)
- U-Clips (x2)

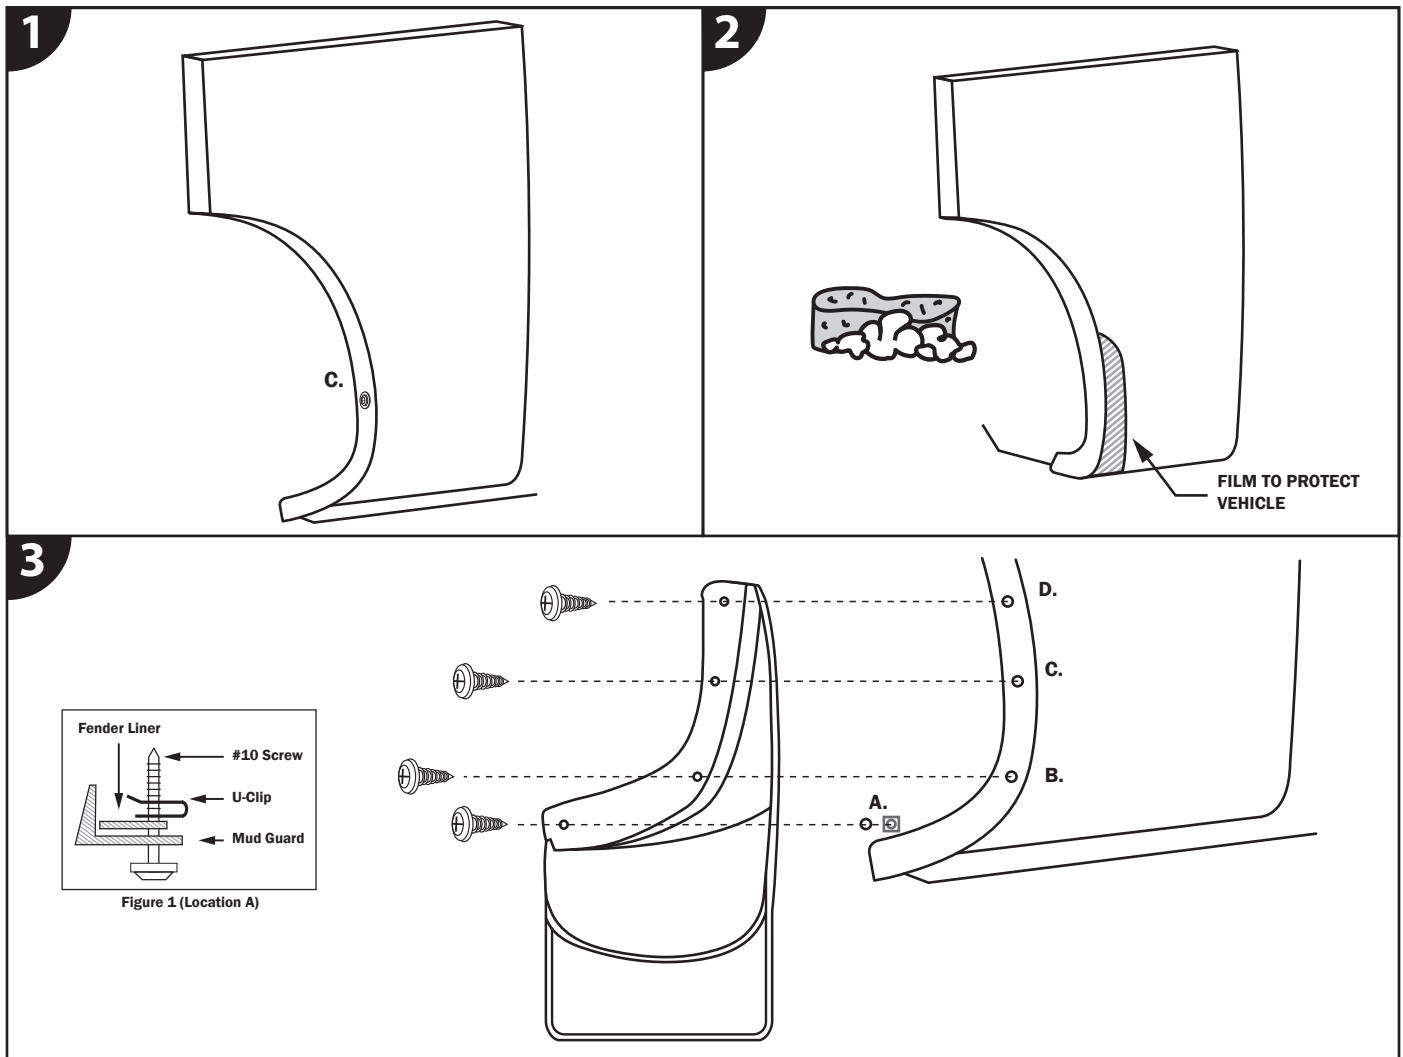

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- a. Remove your existing fastener from location C.

STEP 2. Apply film to protect vehicle.

- a. Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- b. Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- a. Using #10 Screw replace existing fastener and attach mud guard at locations C.
- b. Use the mud guard as a template to center punch and then drill a 1/8" hole at locations B, and D.
- c. Screw #10 Screws into newly-drilled locations B, and D.
- d. Drill 1/8" hole at location A.
- e. Where you just drilled at location A, use the U-Clip as a nut behind the fender liner, and screw in a #10 screw through the mud guard, fender liner hole, and U-clip. See Figure 1.