

INSTALLATION INSTRUCTIONS



No. 940200




CUSTOM MOLDED FRONT MUD GUARDS FOR SILVERADO

Tools Needed

- Drill with 1/8" bit
- Center punch
- Phillips head screwdriver

Included in Box

- Front Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x4)
- #8 Screws and Washers (x4)
- U-Clip (x2)

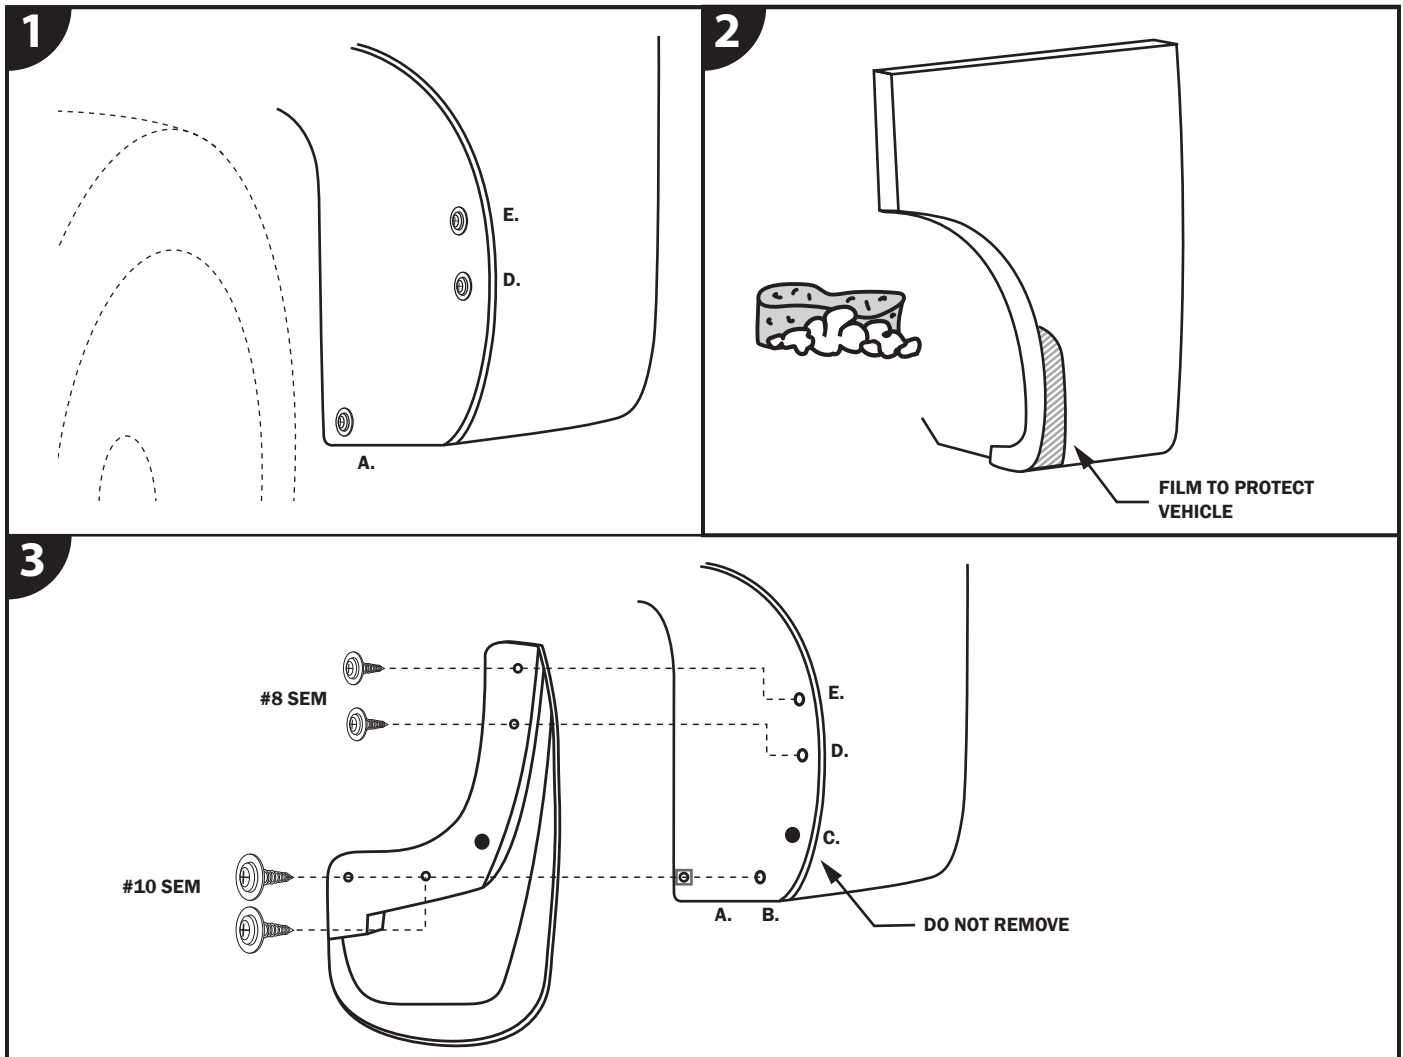

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- Remove the existing fasteners from locations A, D, and E. These will be reused again in Step 3.

STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- Install U-Clip at location A. It will clip over the metal.
- Using smaller #8 Screws and Washers attach mud guard at locations D and E.
- Install #10 Screws and Washers at location A.
- Line up mud guard and drill an 1/8" hole at location B.
- Install the #10 Screws and Washers location B.