



## CUSTOM MOLDED FRONT MUD GUARD FOR RAM INSTALLATION INSTRUCTIONS

### Tools Required


- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit

### Package Contents

- Driver & passenger side front mud guard
- Film to protect vehicle
- #10 SEM Screws (6x)
- Medium U-Clip (6x)


**STEP 1 - DETERMINE WHICH EXISTING FENDER GUARDS YOUR RAM HAS.** Does your vehicle have A or B?

- A. IF YOU HAVE A SMALL GUARD, PROCEED TO STEP 2.  
 B. IF YOU HAVE A LARGE GUARD, PROCEED TO STEP 5.

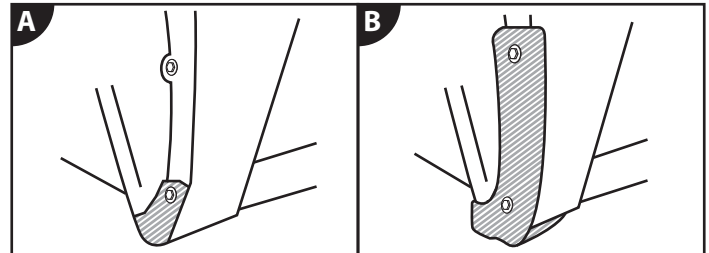

FOR EXISTING SMALL GUARDS ONLY

FOR EXISTING SMALL GUARDS ONLY

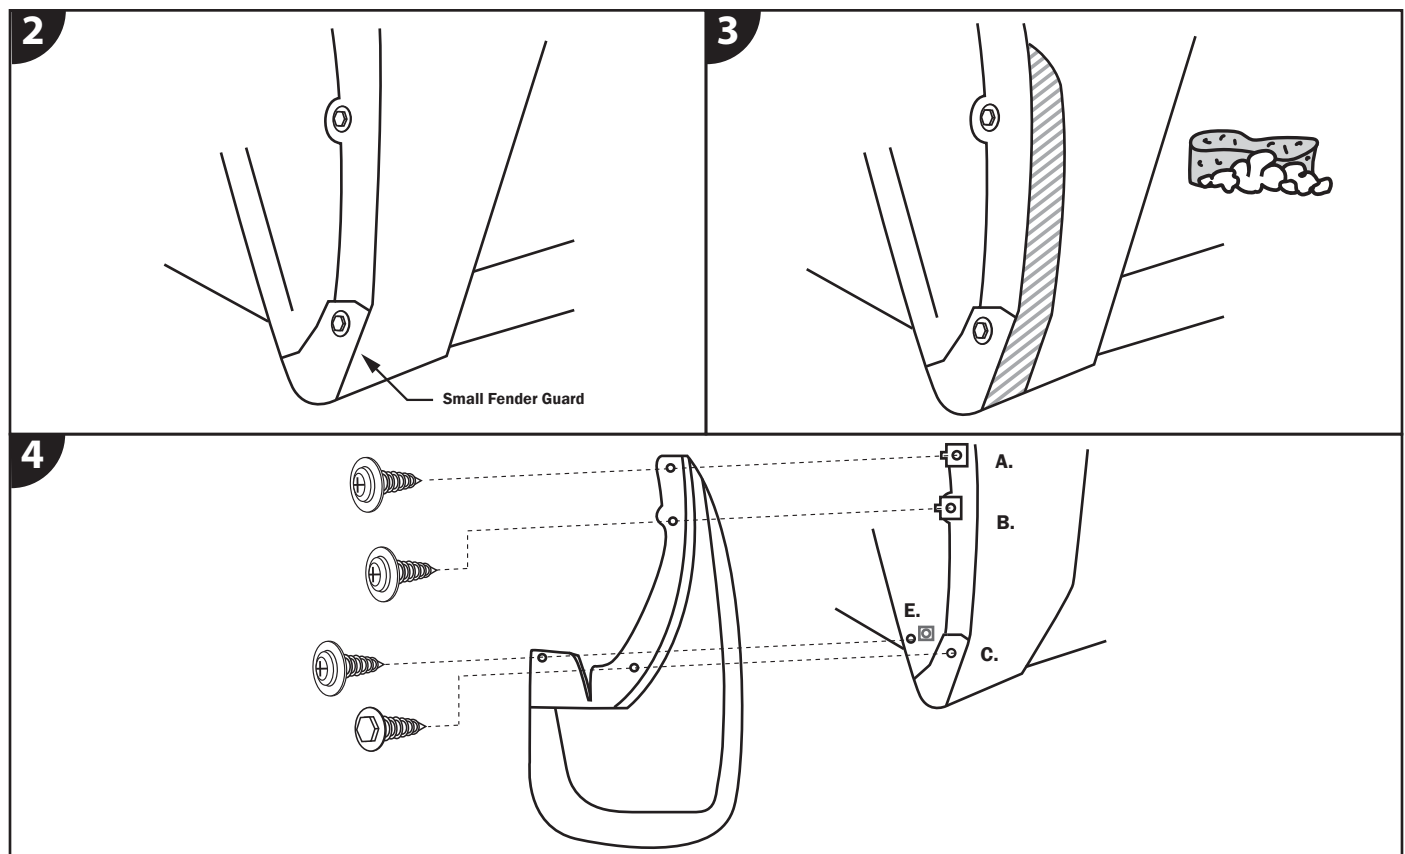

### STEP 2. Identify Fender Guard

- a. If your vehicle has the small fender guard you do not need to remove. (If you have the large guard you will need to remove, see step 5)

### STEP 3. Film to Protect Vehicle

- a. Clean the area where the film to protect vehicle will be placed on the fender with a clean cotton cloth or wet alcohol pad.  
 b. Use soapy water to wet film and install as shown on a clean fender. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 4. Mud Guard Installation

- a. Remove the existing fastener from location C.  
 b. If you have a factory fastener at location B remove it as well.  
 c. Attach the mud guard at location C (and B if applicable) with the existing fastener(s).  
 d. If there is no existing fastener at location B, using mud guard as a template drill 1/8" hole and install medium u-clip and #10 screw.  
 e. Using the mud guard as a template, mark and drill 1/8" hole at location A and E.  
 f. Install a Medium U-Clips at location A and E and install #10 SEM Screws.



## CUSTOM MOLDED FRONT MUD GUARD FOR RAM INSTALLATION INSTRUCTIONS

### Tools Required

- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit


### Package Contents

- Driver & passenger side front mud guard
- Film to protect vehicle
- #10 SEM Screws (6x)
- Medium U-Clip (6x)

### STEP 5 – CONFIRM YOU HAVE THE LARGE EXISTING FENDER GUARD.

Continue to step 6 if your vehicle has the large fender guard.

FOR EXISTING LARGE GUARDS ONLY

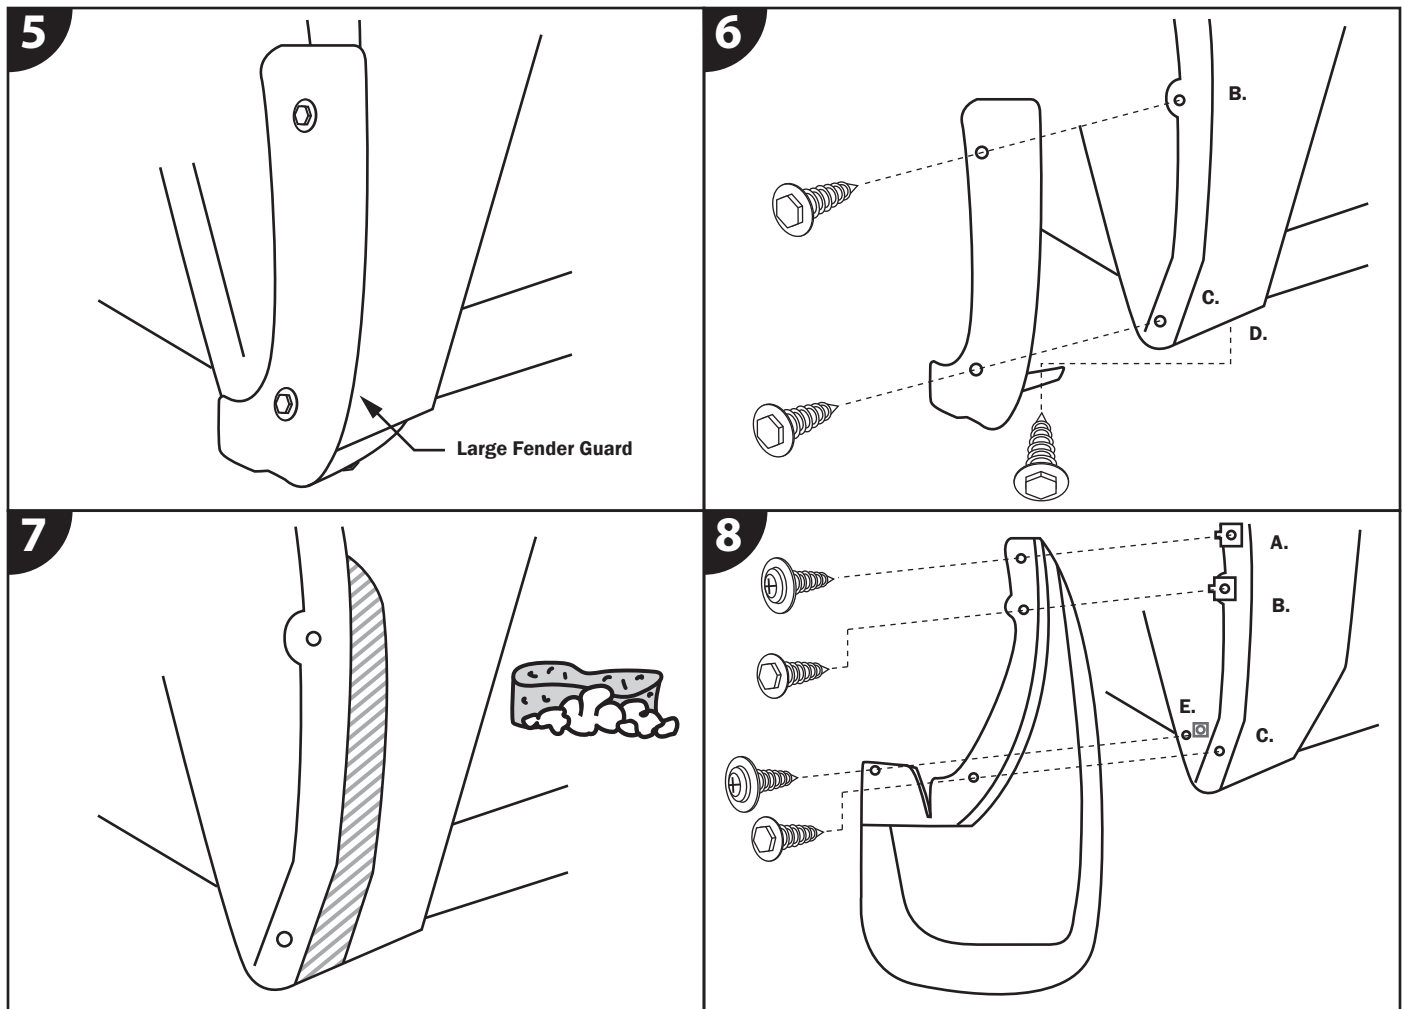

FOR EXISTING LARGE GUARDS ONLY

### STEP 6. Fender Guard Removal

- Remove the three factory fastener to remove the large fender guard. (If you have small guard see step 2)

### STEP 7. Film to Protect Vehicle

- Clean the area where the film to protect vehicle will be placed on the fender with a clean cotton cloth or wet alcohol pad.
- Use soapy water to wet film and install as shown on a clean fender. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 8. Mud Guard Installation

- Remove the existing fastener from location B, C and D. Reuse fastener B and C after removal of the large fender guard.
- Attach the mud guard at location C (and B if applicable) with the existing fastener(s).
- Using the mud guard as a template, mark and drill 1/8" hole at location A and E.
- Install a Medium U-Clips at location A and E and install #10 SEM Screws.



## CUSTOM MOLDED REAR MUD GUARD FOR RAM INSTALLATION INSTRUCTIONS

### Tools Required


- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit

### Package Contents


- Driver & passenger side rear mud guard
- Film to protect vehicle
- #10 Screws (2x)
- Fender Washers (2x)
- Small U-Clip (2x)

**STEP 1 – DETERMINE WHICH EXISTING FENDER GUARDS YOUR RAM HAS.** Does your vehicle have have A or B?

- A. IF YOU HAVE A SMALL GUARD, PROCEED TO STEP 2.  
 B. IF YOU HAVE A LARGE GUARD, PROCEED TO STEP 5.

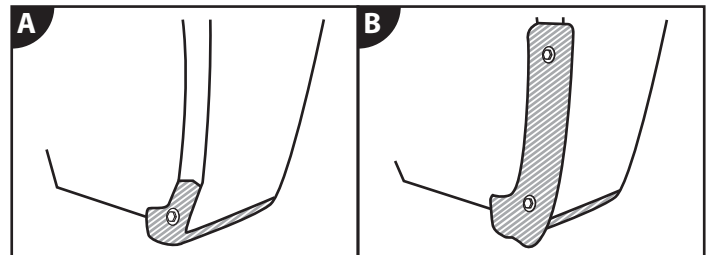

FOR EXISTING SMALL GUARDS ONLY

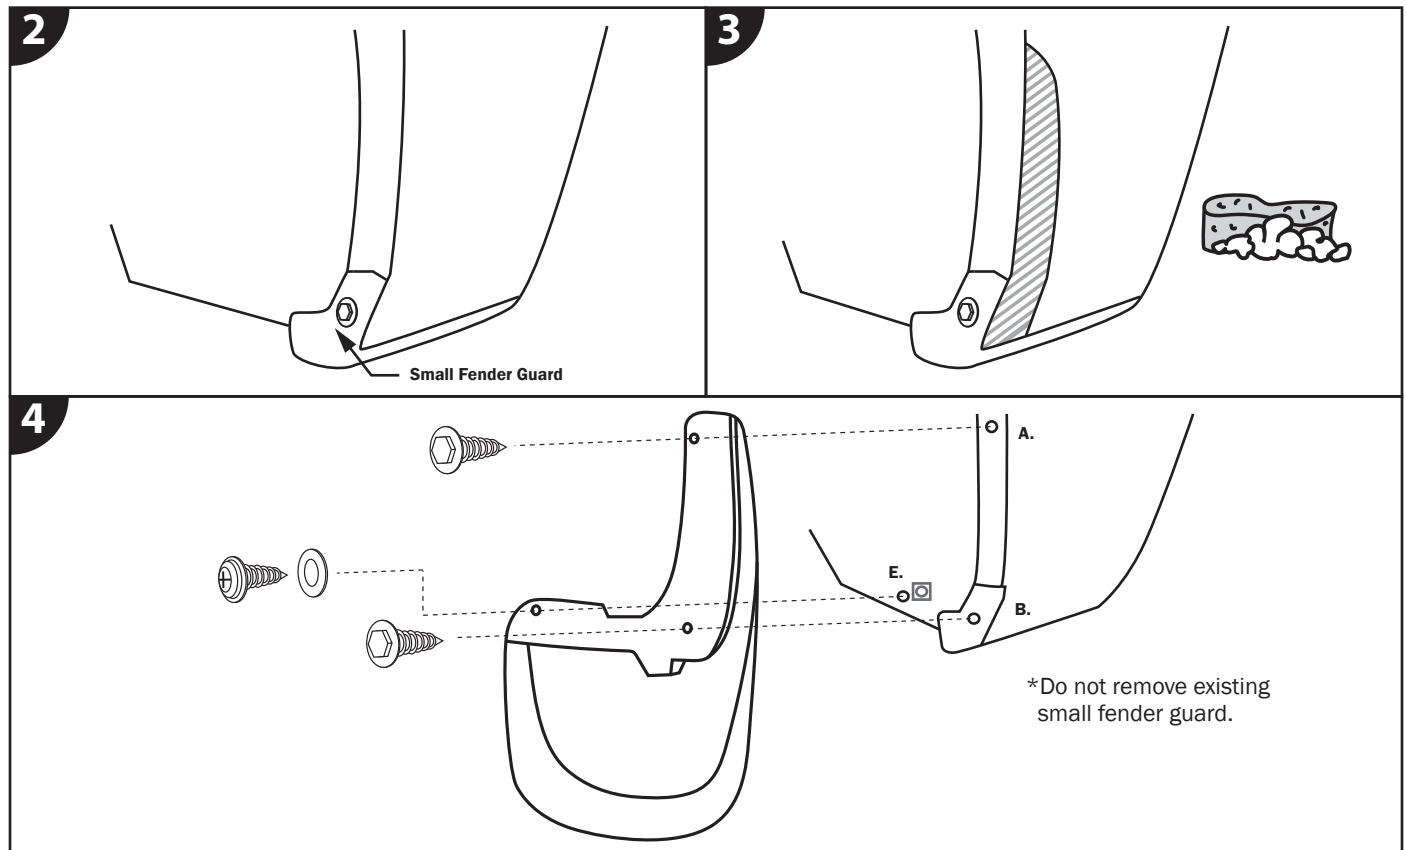

FOR EXISTING SMALL GUARDS ONLY

### STEP 2. Identify Fender Guard

- a. Confirm you have the small fender guard existing on your truck. (If you have the large one, proceed to step 5)

### STEP 3. Film to Protect Vehicle

- a. Clean the area where the film to protect vehicle will be placed on the fender with a clean cotton cloth or wet alcohol pad.  
 b. Use soapy water to wet film and install as shown on a clean fender. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 4. Mud Guard Installation

- a. Remove the existing fastener from locations A and B. Do not remove the small fender guard.  
 b. Attach the mud guard at locations A and B with the existing fasteners.  
 c. Using the mud guard as a template, mark and drill 1/8" hole at location E.  
 d. Install a #10 Screw and Washer at location E, into the fender liner and into a Small U-Clip on the backside of the fender liner.



## CUSTOM MOLDED REAR MUD GUARD FOR RAM INSTALLATION INSTRUCTIONS

### Tools Required

- Phillips head screwdriver
- Center punch
- Drill with 1/8" drill bit


### Package Contents

- Driver & passenger side rear mud guard
- Film to protect vehicle
- #10 Screws (2x)
- Fender Washers (2x)
- Small U-Clip (2x)

### STEP 5 – CONFIRM YOU HAVE THE LARGE EXISTING FENDER GUARD.

Continue to step 6 if your vehicle has the large fender guard.

FOR EXISTING LARGE GUARDS ONLY

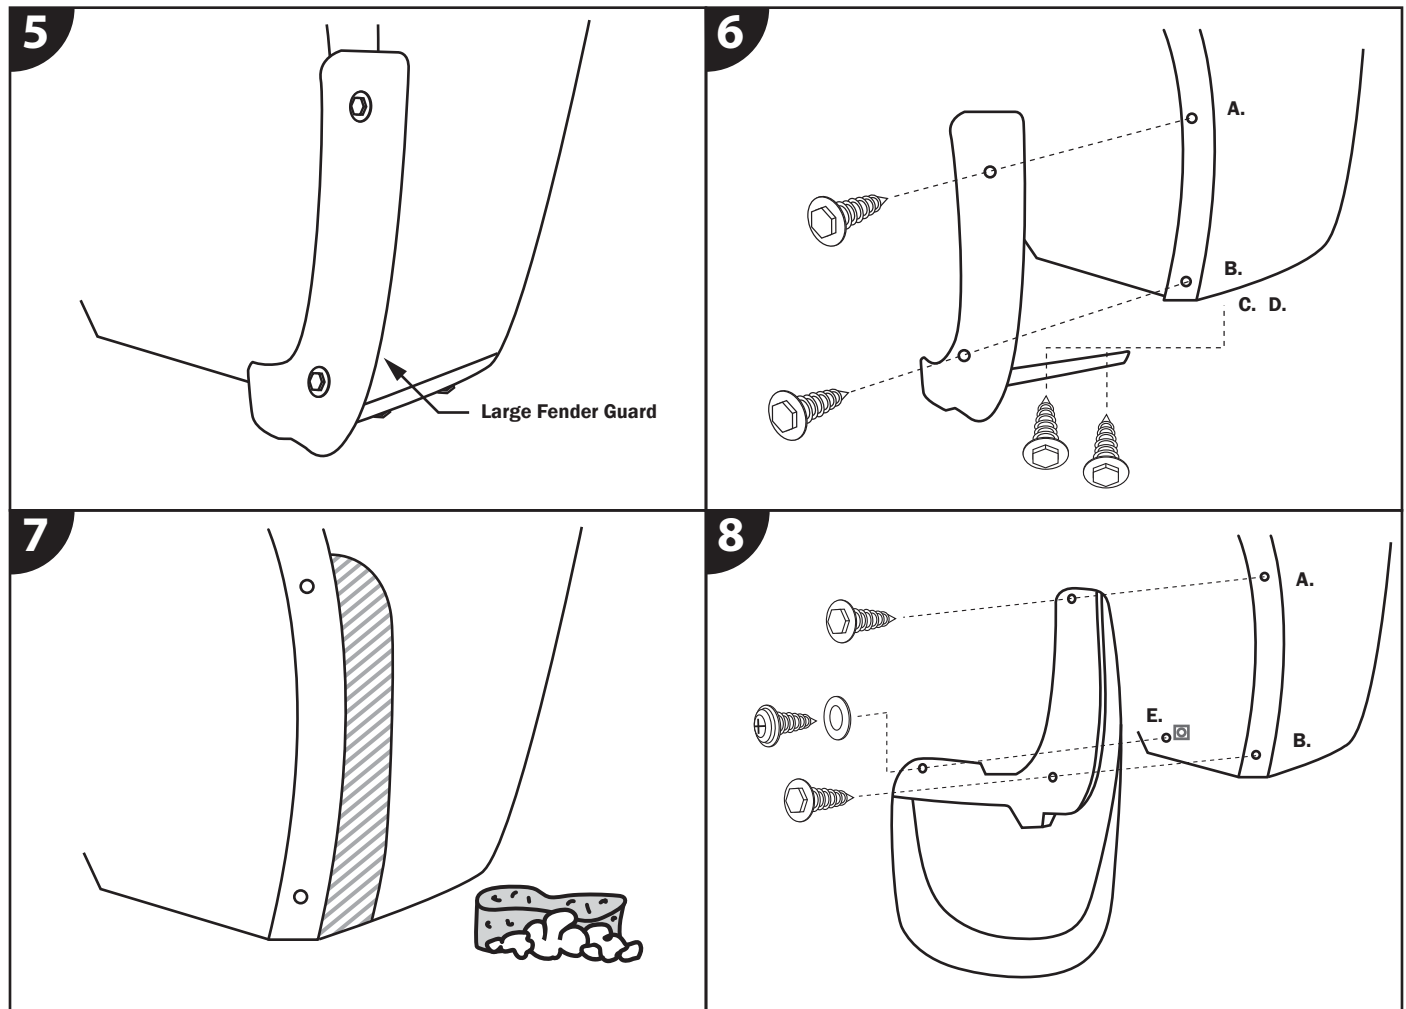

FOR EXISTING LARGE GUARDS ONLY

### STEP 6. Fender Guard Removal

- Remove the four factory fastener A, B, C, and D. Remove the large fender guard. (If you have small existing guard, go back to step 2)

### STEP 7. Film to Protect Vehicle

- Clean the area where the film to protect vehicle will be placed on the fender with a clean cotton cloth or wet alcohol pad.
- Use soapy water to wet film and install as shown on a clean fender. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 8. Mud Guard Installation

- Attach the mud guard at locations A and B with the existing fasteners.
- Using the mud guard as a template, mark and drill 1/8" hole at location E.
- Install a #10 Screw and Washer at location E, into the fender liner and into a Small U-Clip on the backside of the fender liner.